



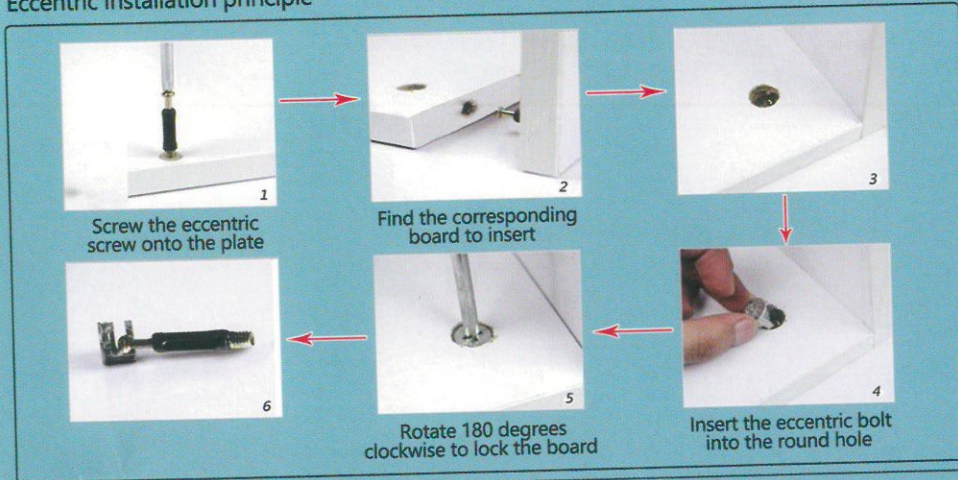


FUR-1706-1

# Desk installation diagram

			
Eccentric screw	Eccentric bolt	3.5CM self tapping screw	Metal pin
A*26	B*26	C*48	D*10

## Eccentric installation principle



1 Screw the eccentric screw onto the plate

2 Find the corresponding board to insert


3

4

5 Rotate 180 degrees clockwise to lock the board

6 Insert the eccentric bolt into the round hole


## Installation of drawer section

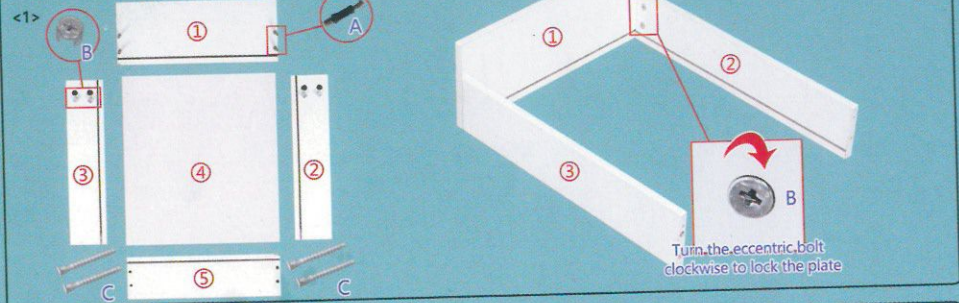

<1>

<2>

Turn the eccentric bolt clockwise to lock the plate

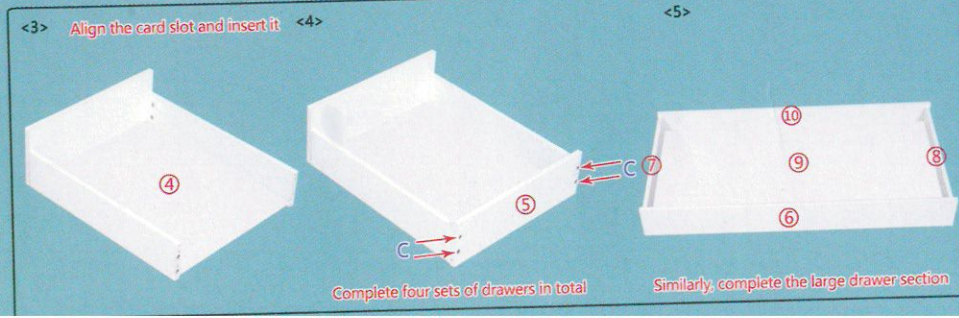


<3> Align the card slot and insert it

<4>

Complete four sets of drawers in total

## Plate part

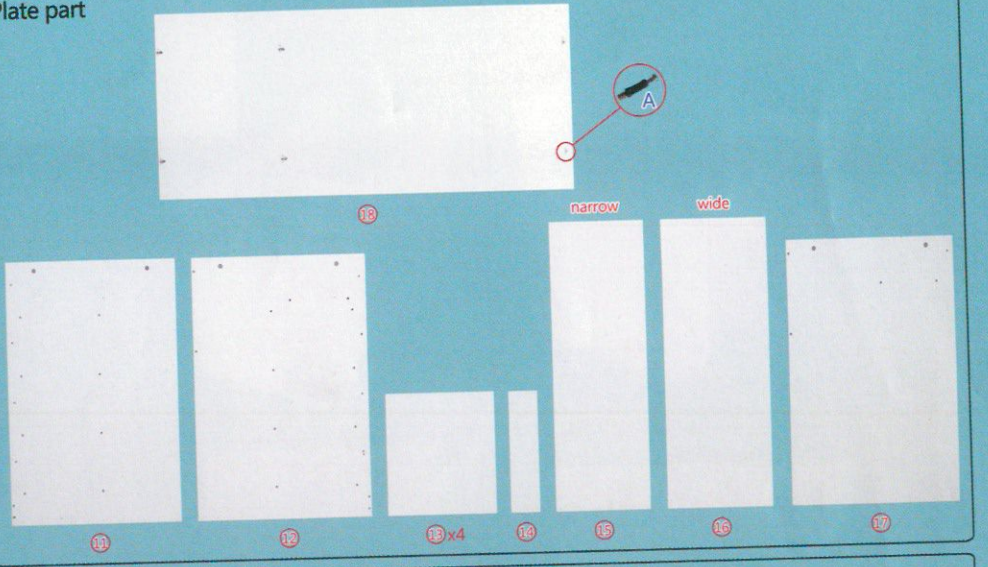

18

narrow

wide

19

19x4


19

15

16

17

## Step 1: Installation of overall parts

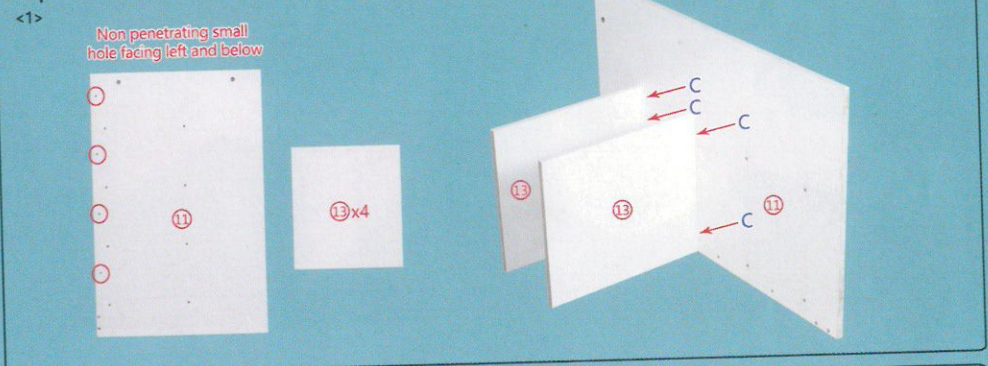

<1>

Non penetrating small hole facing left and below

11

13

13x4

15

16

17


C

C

C

C

C

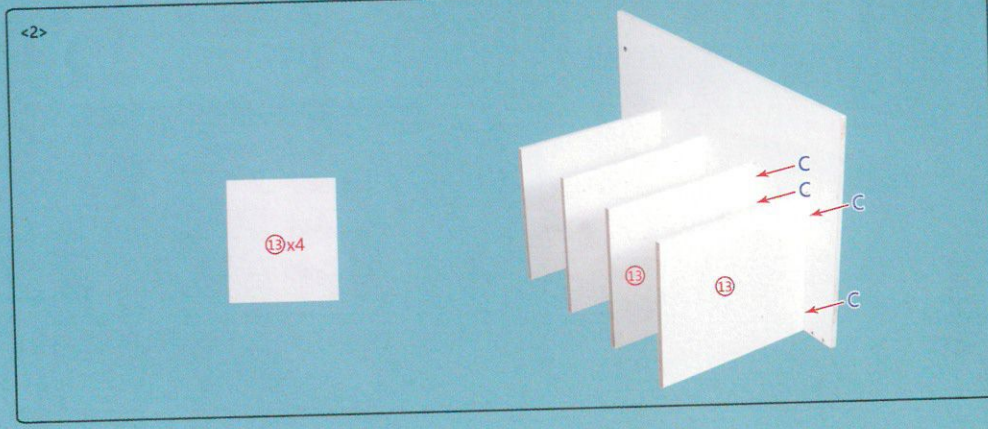

<2>

13

13

13

13

15

16

17

C

C

C

C



